

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

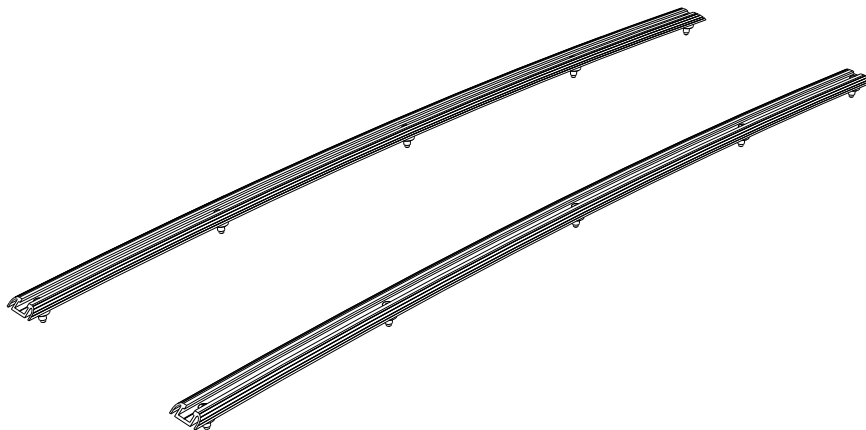

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	2 X	Track - 1240mm Long
2	2 X	Rubber Strip - 1240mm Long
3	10 X	M6 x 40 Countersink Bolt
4	10 X	Aluminum Spacer - OD 20mm, ID8mm x 18mm Long
5	10 X	M6 Riv Nut

TOOLS NEEDED



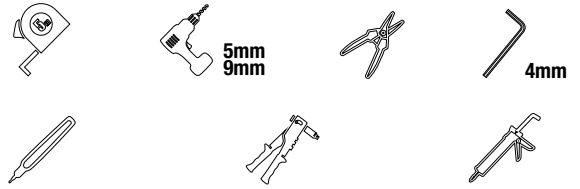


FIGURE 1.1

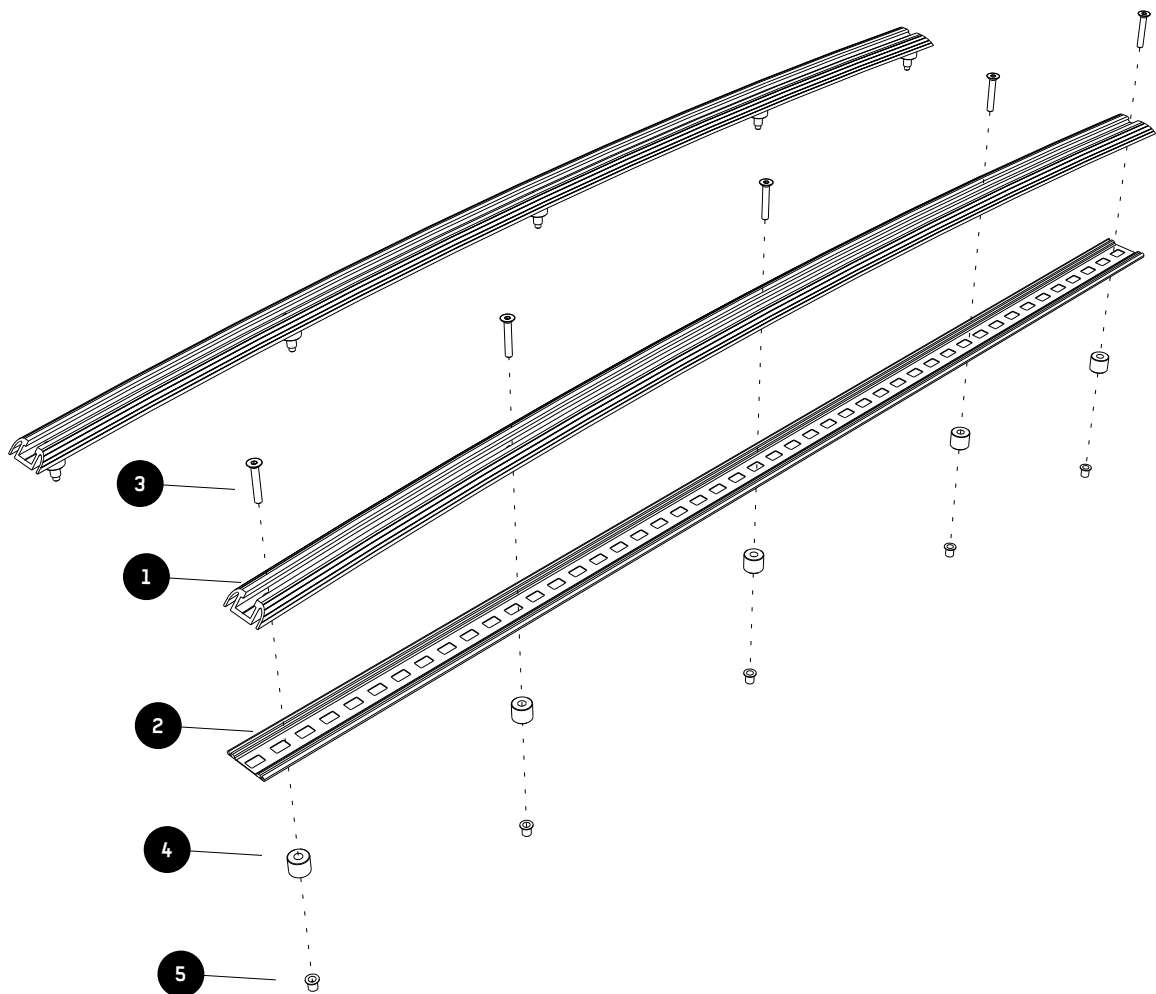

2.1

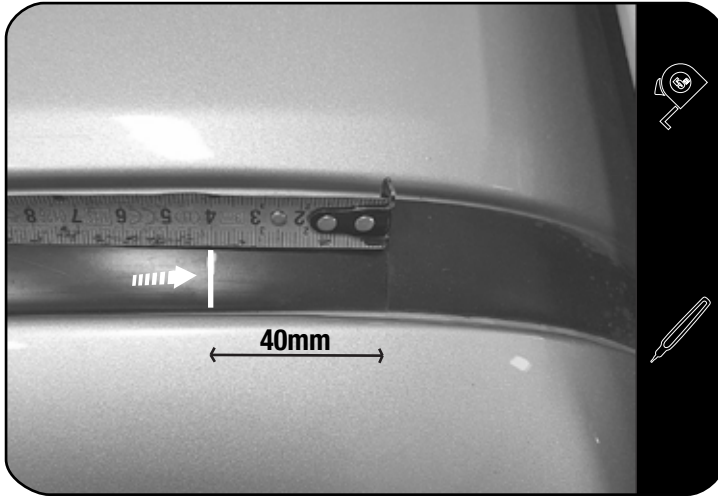


Looking at the rear of the ditch molding, measure 40mm from the joining line and make a mark.

2.2



Place the rear of the Track (Item 1) on the mark made in Step 2.1 and mark the front of the Track on the ditch molding.

2.3

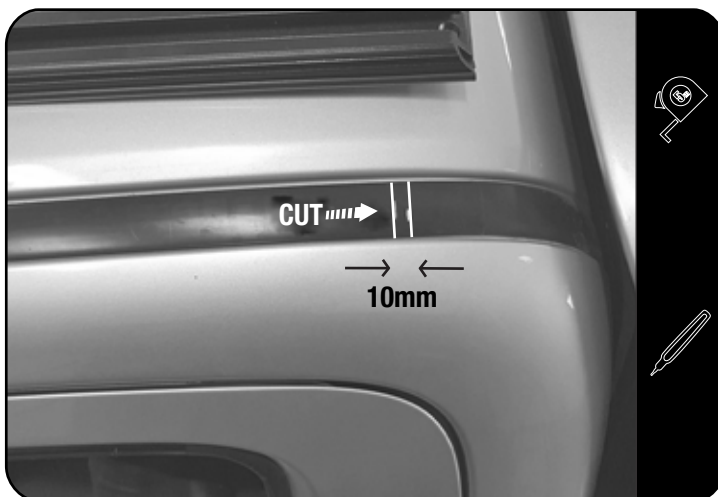

Remove the Track and make new marks 10mm inward from the marks made in Step 2.1 and 2.2.

2.4



Cut the ditch molding on the new marks made in Step 2.3. and discard the centre portion.

2.5



Place the Track back lining up the first mark made in Step 2.1 and centre it over the ditch. Mark all five holes in the Track onto the vehicle.

Remove the Track and drill a 5mm pilot hole on all the marks you have made. Open the holes to 9mm.



5mm
9mm

2.6



Insert and set M6 Riv Nuts (Item 4) in all the holes drilled in Step 2.4.

Place Silicone in and around all the Riv Nuts.



2.7



Place the Aluminum Spacers (Item 5), countersunk side down over all the Riv Nuts.



Remove the backing strip on the underside of the Track and fit the Rubber Strip (Item 2) to both Tracks.

2.8



Place the Track in position again and secure using M6 x 40 Countersink Bolts (Item 3).

4mm

3**COMPLETION****3.1**

Congratulations! You did it. Take a step back and admire your work!

4**INSTALL OTHER VEHICLE AND RACK ACCESSORIES**

Now's the time to visit your favorite Front Runner Dealer in person or online.

IMPORTANT! ⚠

Front Runner rack kits often have a higher load rating than the vehicles they are mounted to. Please refer to your specific vehicle manufacturer for a recommended roof load rating. Front Runner cannot be responsible for improper loading beyond the vehicle manufacturer's stated load capacity.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    